
Locate your nozzle style and follow installation instructions below

Installing Premium adjustable nozzles into your display



Tools needed: 1/2" Drill Bit, Power Drill

For snug fit use 15/32" or 12mm bit

Drill a 1/2 inch hole wherever you want the adjustable nozzle placed. Take the misting assembly apart by pressing the inner ring (collet) (#1) and pulling out the top fitting (#2). Undo the top nut on the bulkhead (#3). Feed the misting assembly through the previously drilled hole (#4). Put the nut back onto the bulkhead and hand tighten. Plug the fitting (#2) back into the bulkhead. Repeat for all the remaining misting assemblies. Cut tubing to size and connect all the assemblies together.

Installing Value adjustable nozzles into your display



Tools needed: 5/8" Drill Bit, Power Drill

Drill a 5/8 inch hole wherever you want the adjustable nozzle placed. Take the misting assembly apart doing the following. If present remove the blue collet lock (#1). Press on the collet (#1) and pull out the top fitting (#3). Undo the nut (#4). Feed the misting assembly through the previously drilled hole (#5). Put the nut back onto the bulkhead and hand tighten. Plug the fitting (#3) back into the bulkhead. Repeat for all the remaining misting assemblies. Cut tubing to size and connect all the assemblies together.

Installing premium non adjustable nozzle into your display



Tools needed: 5/8" Drill Bit, Power Drill

Drill a 5/8 inch hole wherever you want the adjustable nozzle placed. Take the misting assembly apart by pressing the inner ring (#1) and pulling out the top fitting (#2). Undo the top nut on the bulkhead (#3). Feed the misting assembly through the previously drilled hole (#4). Put the nut back onto the bulkhead and hand tighten. Plug the fitting (#2) back into the bulkhead. Repeat for all the remaining misting assemblies. Cut tubing to size and connect all the assemblies together.